

Hoveai Air Mouse – User Guide

Welcome

Thank you for choosing the Hoveai Air Mouse.

This guide will help you get started and make the most of your new device.


1. Modes of Use

✓ Air Mode (Handheld Use)


Use the Hoveai Air Mouse in your hand to control presentations, media, or your desktop remotely.

Controls:


- **Cursor movement:** Slide your finger on the touch surface
- **Left click:** Single finger tap
- **Right click:** Two-finger tap
- **Scroll:** Slide along left or top edge
- **Next page:** Tap lower half of touchpad
- **Laser pointer:** Click laser button
- **Switch modes:** Double-click laser button (Laser → Highlight → Digital Light)

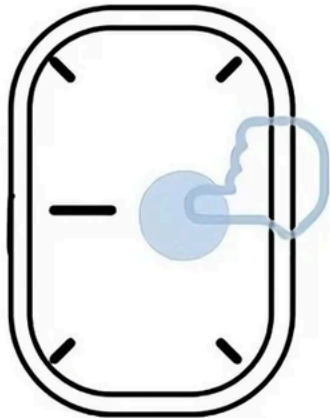


**Touch surface
cursor
movement**

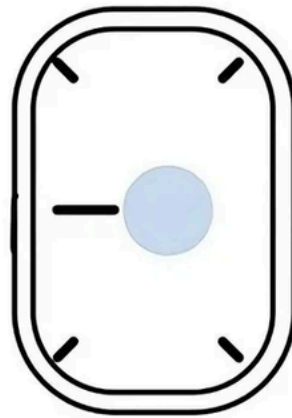

**Single-finger
left-click**

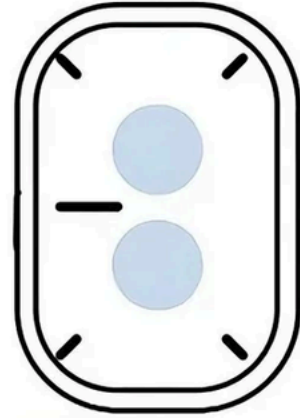

**Two-finger
touch Right-
click**

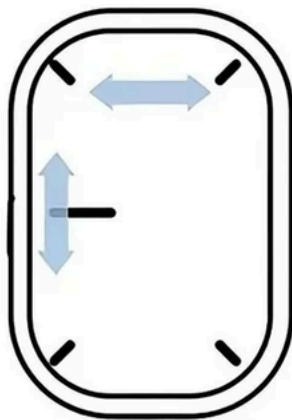


Slide left edge

Longitudinal movement

Slide top edge

Move laterally

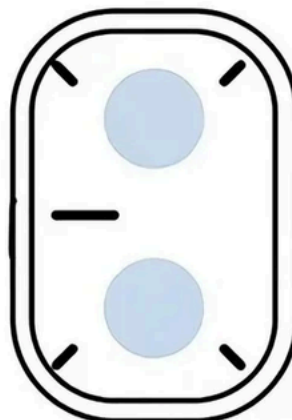

**Press the upper half of
the touchpad**

**Press the lower half of
the touchpad Next page**



Click the laser button

Light up the laser

Double-click the laser button


**Empty mouse mode, highlight
mode, digital light, switch
between the three modes**

✓ Ground Mode (Touchpad Mode)


Place the Hoveai Air Mouse on a surface and use it as a precision multi-touch trackpad.

Gestures:


- **Left/Right click:** Press left or right edge
- **Vertical scroll:** Slide up/down
- **Desktop switch:** Two fingers swipe left/right
- **Zoom in/out:** Pinch or spread two fingers
- **Show multitasking:** Two fingers swipe up
- **Show desktop:** Two fingers swipe down
- **Show all apps:** Double-tap with two fingers

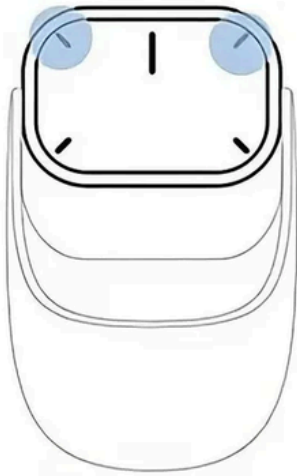


Press left/right
Mouse left/right

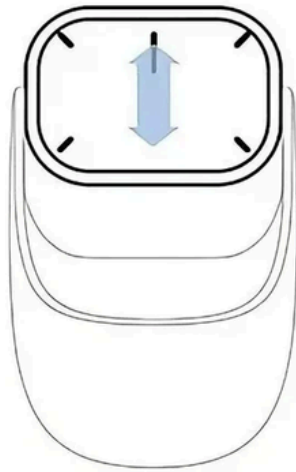


Vertical slide
Page slide

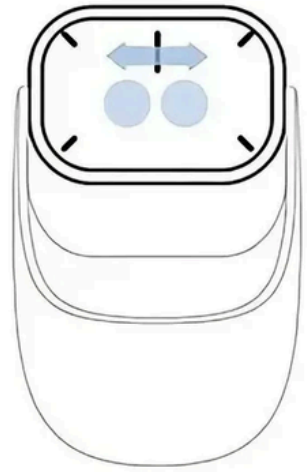

Two fingers slide left and right
Desktop Switch

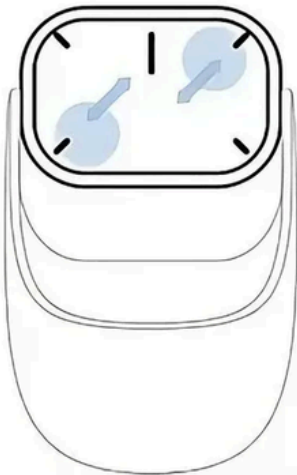


Two fingers slide towards each other
Zoom In/Out

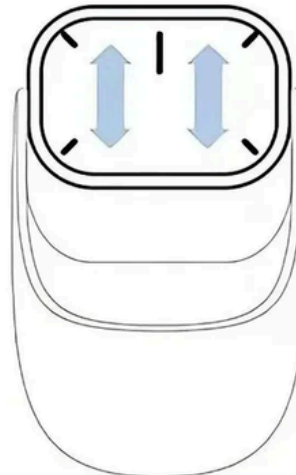

Two-finger slide-up
Show multitasking

Double Finger Slide
Show Desktop

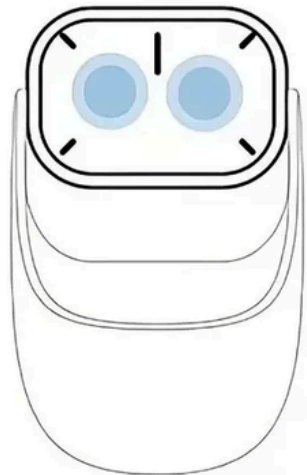

Two-finger double-click
Show all apps

2. Driver Installation

To enable full gesture support, please install the official driver:

[Download Driver for Windows]

[Download Driver for macOS]

(Links available on: hoveai.com/tools-and-drivers)

3. Safety & Tips

- Use a clean, flat surface for Ground Mode
- Do not block the laser sensor in Air Mode
- Battery life: up to 20 days on full charge
- Recharge via USB-C port

Need Help?

Contact support at support@hoveai.com.

Move Freely. Think Clearly.

Hoveai – Precision at your fingertips.